

- Smaller size (same as MPX)
- Dual fiber inputs: OM1/OM2 or OM3/OM4
- Low noise
- Light weight
- Shake frequency of 10Hz




Arden's Modal Explorer makes measurement of Encircled Flux easy and accurate, and it complies with international standards. But if you are measuring laser-based transmission light sources for multi-mode systems you may need to use a test jumper assembly and fiber shaker in order to avoid "speckle". Industry standards, for example IEEE 802.3aq and FOTP-203, call for the use of a mechanical fiber shaker.

The Arden Fiber Shaker reduces speckle by changing the differential path length of the modes in the fiber. The fiber is shaken continuously to allow the speckle to be averaged out. This will ensure sufficient repeatability for the measurement of the Encircled Flux.



Light source output (with shaker)

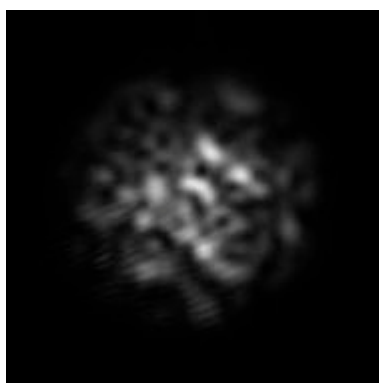

Light source output (without Shaker)

Technical Specification

Fiber Type	OM1, OM2, OM3 and OM4
Input & Output Connectors	FC/PC
Frequency of Shaking	10Hz
Insertion Loss	<1dB
Size & Weight	260 mm (W) x 270 mm (D) x 90 mm (H), 2.0 kg
Power	External switched mode power supply. Requirements: 90 - 240V, <500 mA, <50W
Operating Temperature	+5 to +40 °C
Storage Temperature	-10 to +50 °C